


MDA8-750PS

Software Settings



Select "BRIDGE MODE" in the setting menu and turn on the channel switch to be bridged.

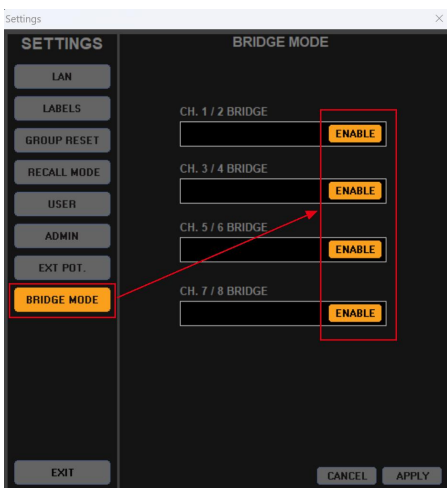

MDA8-750PS

In the routing interface, select the output voltage mode of the corresponding channel.



BTL output connection diagram

